

# Screen Replacement Instructions



## REMOVING HEAD COVER:

FIGURE 1 Remove 2 screws that hold head cover in place.

FIGURE 2 Remove cover from door frame by downward.



FIGURE 1



FIGURE 2

## DISCONNECTING SCREEN FROM SASH:

FIGURE 3–4 Using a flat screwdriver, pry rubber screen connector out of the notch in the top of the sash.

FIGURE 5 Slide screen out of sash let it slowly retract into the head of the door.



FIGURE 3



FIGURE 4

## REMOVING SCREEN TUBE:

FIGURE 6–7 Using a flat screw driver, pry right side of tube out of door frame, and slide the pin out of the slot in the bracket.

FIGURE 8 Pull left side of tube out of door frame and discard old tube.



FIGURE 5



FIGURE 6

## INSTALLING NEW SCREEN TUBE:

FIGURE 9 Slide rubber screen connector into top of operating insert.

FIGURE 10 Using tool provided, wind spring clockwise 20 turns (as viewed from the end of the screen tube). Be sure to hold onto tool tightly!!!



FIGURE 7



FIGURE 8



FIGURE 9



FIGURE 10

## INSTALLING NEW SCREEN TUBE (continued):

FIGURE 11 Insert left end of screen tube into bracket connected to the left side of the door frame.

FIGURE 12–13 Once inserted, remove tool and insert the right side of screen tube into the slot in the bracket connected to the right side of the door frame.

BE CAREFUL NOT TO TEAR SCREEN ON THE DOOR FRAME!

FIGURE 14 Seat rubber screen connector into door frame groove. The rubber connector should extend into the same track as the screen mesh. If the rubber is bent and not seated in the track properly, the screen may not operate properly and may cause future damage to your new screen. (FIG 14 shows an improperly seated screen connector)

FIGURE 15 Shows a properly seated screen connector

Operate insert to make sure it operates smoothly.



FIGURE 11

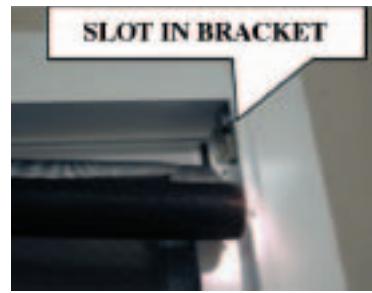


FIGURE 12



FIGURE 13



FIGURE 14



FIGURE 15



FIGURE 16



FIGURE 17

## TROUBLESHOOTING GUIDE

Screen catches when pulled down.	Screen roll may have come out of the brackets. Remove cover and make sure screen roll is seated properly.
Screen won't retract – screen bunches up or becomes baggy.	Screen roll may be too tight which can cause binding. Should be 1/8" of play side to side between the screen roll and the brackets. By inserting a flat screwdriver between the screen roll and the bracket and giving a slight twist, more play can be acquired. Be careful not to pry too far or tension to the screen roll will be lost if the screen roll comes out of the bracket.