

QuickFit™ Key Cylinder Removal

- Step 1: Loosen the set screw on the handle with a 1/8" Allen wrench and remove the handles. Then loosen the interior face plate screws and remove the trim plates from the door.
- Step 2: With a flat head screw driver or similar tool, press down the retention spring on the back of the key cylinder (Figure 1 & 2) and push the cylinder through the front of the outside trim plate.

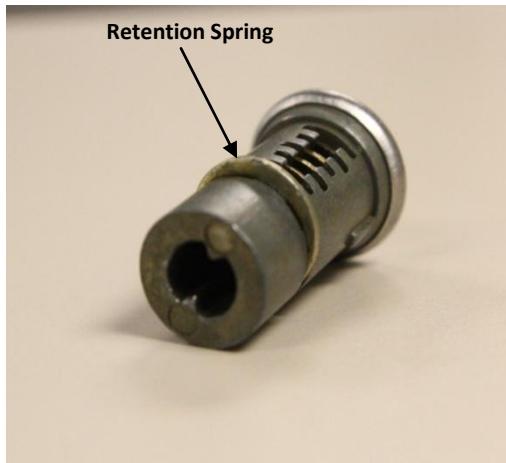


FIGURE 1



FIGURE 2

- Step 3: Insert the new cylinder through the outside trim plate until the retention spring fully extends.
- Step 4: Install handles and trim plates back onto the door.