


Fold along dotted line and place over the edge of the door
FOLD ON THIS LINE

MARK AND DRILL $5/16"$ HOLES THROUGH DOOR.
 REAM OUT AND DEBURR CENTER HOLE.

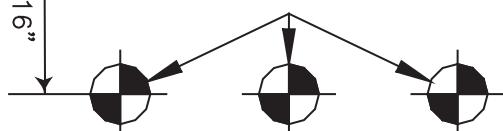


DRILLING TEMPLATE FOR WRIGHT 333N LATCH
 Caution: Locate installation so that latch will not hit entrance lock.

1. With door in closed position, place template on inside of door at desired height so that short folded end is over the edge of the door.
2. Mark position of the three holes.
3. Using $5/16"$ drill, bore the three holes straight through the face of the door.

SPINDLE MUST BE FREE

2. Place spindle and spring in thumb button and insert them into outside handle.
3. Push this assembly through the drilled holes from the outside of door. Then position lever handle mechanism over holes on inside of door and insert machine screws through door into threaded sleeves. Draw up firmly. Securely screw lower end of outside handle to door if supplied.
4. Install strike plate on wood jamb or aluminum "Z" bar so that it firmly engages bolt

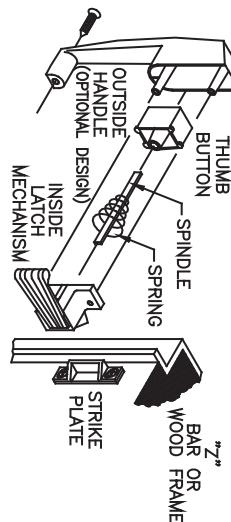

INSTALLATION INSTRUCTIONS FOR NO. 333N PUSH BUTTON LATCH

CAUTION: LOCATE INSTALLATION SO THAT LATCH WILL NOT HIT ENTRANCE LOCK.

1. For accurate installation, follow instructions on drilling template.